



HYUNDAI HY 50



Pos	Code	Part	Pos	Code	Part
1	HY50-1	Starter comp, recoil	64	HY50-64	Spring, throttle return
2	HY50-2	Engine switch	65	HY50-65	Rod, governor
3	HY50-3	Fan, cover comp	66	HY50-66	Nut, M6
4	HY50-4	Shroud comp	67	HY50-67	Case comp, air cleaner
5	HY50-5	Flange nut M14	68	HY50-68	Separator, air cleaner
6	HY50-6	Pulley, starter	69	HY50-69	Element, air cleaner
7	HY50-7	Fan, cooling	70	HY50-70	Cover, air cleaner
8	HY50-8	Flywheel comp	71	HY50-71	Nut, M6
9	HY50-9	Plate, side	72	HY50-72	Clip, tube
10	HY50-10	Diode	73	HY50-73	Tube, fuel
11	HY50-11	Flange bolt M6×12	74	HY50-74	Rubber, supporter
12	HY50-12	Coil assy. ignition	75	HY50-75	Flange bolt M6×25
13	HY50-13	Flange bolt M6×25	76	HY50-76	Joint, fuel tank
14	HY50-14	Bolt, drain lug	77	HY50-77	Tank fuel
15	HY50-15	Washer, drain lug	78	HY50-78	Fuel filler cap
16	HY50-16	Oil seal, 25×41.25×6	79	HY50-79	Filter, fuel
17	HY50-17	Crank case assy.	80	HY50-80	Screw, tapping M5×8
18	HY50-18	Carburetor assy.	81	HY50-81	Protector, muffler
19	HY50-19	Packing, carburetor	82	HY50-82	Muffler
20	HY50-20	Insulator, carburetor	83	HY50-83	Arrester, spark
21	HY50-21	Packing, insulator	84	HY50-84	Nut, M8
22	HY50-22	Lever comp, choke	85	HY50-85	Casket EX. Pipe
23	HY50-23	Packing air cleaner	86	HY50-86	Crankshaft comp
24	HY50-24	Bolt head, 6×112	87	HY50-87	Flange bolt M6×8
25	HY50-25	Head comp, cylinder	88	HY50-88	Drum wheel
26	HY50-26	Pin, dowel, 10×16	89	HY50-89	Muffler ASSY
27	HY50-27	Casket, cylinder head	90	HY50-90	Air cleaner ASSY
28	HY50-28	Plug, spark	91	HY50-91	Cover, Crankcase
29	HY50-29	Bolt head, M8×32	92	HY50-92	Square head screw
30	HY50-30	Flange bolt M8×60	93	HY50-93	Carburetor ASSY
31	HY50-31	Exhaust piper	94	HY50-94	Fuel Tank ASSY
32	HY50-32	Cover comp, head	95	HY50-95	Flange plate
33	HY50-33	Breather	96	HY50-96	O ring
34	HY50-34	Arm, valve rocker assy.	97	HY50-97	Washer φ10
35	HY50-35	Plate, push rod guide	98	HY50-98	Screw M10×32
36	HY50-36	Rod, push	99	HY50-99	Seal, water
37	HY50-37	Lifter, valve	100	HY50-100	Impellor
38	HY50-38	Camshaft assy.	101	HY50-101	Turbin
39	HY50-39	Valve, EX.	102	HY50-102	O ring 71×5.7
40	HY50-40	Valve, IN.	103	HY50-103	Pump case
41	HY50-41	Seat, valve spring	104	HY50-104	Gasket, port
42	HY50-42	Spring, valve	105	HY50-105	Washer φ8
43	HY50-43	Retainer, EX. Valve spring	106	HY50-106	Screw M8×28
44	HY50-44	Retainer, IN. Valve spring	107	HY50-107	Seal ring
45	HY50-45	Rotator, valve	108	HY50-108	Cover
46	HY50-46	Connecting rod assy.	109	HY50-109	Fixer
47	HY50-47	Clip, piston pin	110	HY50-110	Connector
48	HY50-48	Pin, piston	111	HY50-111	Seal, In & Out port
49	HY50-49	Piston	112	HY50-112	Tube, release
50	HY50-50	Ping set, piston	113	HY50-113	Tube, intake
51	HY50-51	Cap, oil hole	114	HY50-114	Seal washer
52	HY50-52	Flange bolt M8×32	115	HY50-115	Clip
53	HY50-53	Cover assy. crankcase	116	HY50-116	Filter
54	HY50-54	Pin, dowel, 8×14	117	HY50-117	Rubber, shock-absorb
55	HY50-55	Cap assy. oil filler	118	HY50-118	Screw M6×12
56	HY50-56	Packing, case cover	119	HY50-119	Screw M8×32
57	HY50-57	Governor assy.	120	HY50-120	Nut M8
58	HY50-58	Shaft, governor assy.			
59	HY50-59	Radial ball bearing (6025)			
60	HY50-60	Switch assy. oil level			
61	HY50-61	Control assy.			
62	HY50-62	Spring, governor			
63	HY50-63	Arm, governor			