


# Exploded parts list

## GASOLINE GENERATOR


IC390 Engine - HY6000/7000 (L/LE/LE-3)

#### ENGINE- CRANKCASE IC390-A

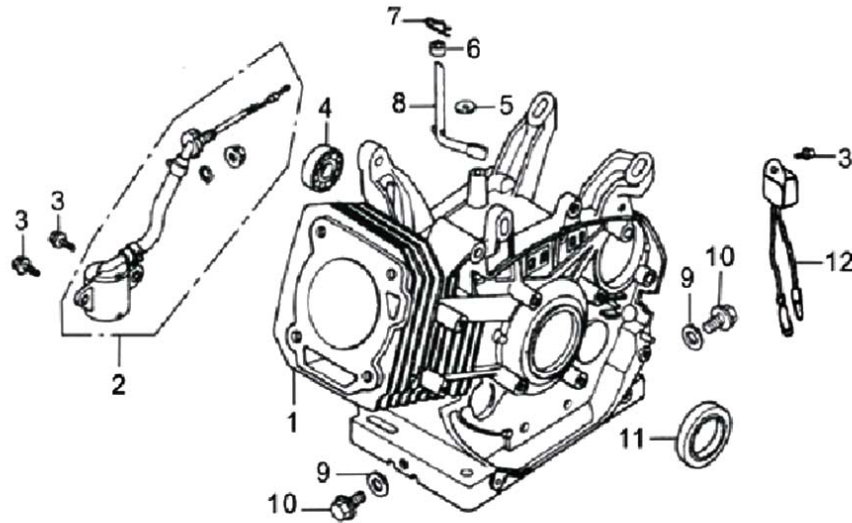


| POS | REF         | DESCRIPTION                | 配件                  | QTY | Remark |
|-----|-------------|----------------------------|---------------------|-----|--------|
| 1   | IC390-A01   | Crankcase 188F             | 曲轴箱体188F            | 1   |        |
| 1-1 | IC390-A01-1 | Crankcase 188FD            | 曲轴箱体188FD电启动        | 1   |        |
| 2   | IC390-A02   | Oil lever switch assy      | 机油传感器188F190F通用     | 1   |        |
| 3   | IC390-A03   | Flange boltM6×12           | 法兰螺栓M6 × 12         | 3   |        |
| 4   | IC390-A04   | Radial ball bearing 6202   | 轴承6202              | 1   |        |
| 5   | IC390-A05   | Spacer, Governor arm shaft | 垫圈 φ 8 × φ 16 × 1.2 | 1   |        |
| 6   | IC390-A06   | Oil seal 8×14×4            | 油封8 × 14 × 4        | 1   |        |
| 7   | IC390-A07   | lock pin                   | 摆杆锁夹                | 1   |        |
| 8   | IC390-A08   | Governor arm shaft         | 调速摆杆                | 1   |        |
| 9   | IC390-A09   | Drain oil bolt washer      | 放油螺栓垫片 12 × 20 × 2  | 2   |        |
| 10  | IC390-A10   | Drain oil bolt M12×1.5×15  | 放油螺栓M12 × 1.5 × 15  | 2   |        |
| 11  | IC390-A11   | Oil seal φ35×φ52×8         | 油封 φ 35 × φ 52 × 8  | 1   |        |
| 12  | IC390-A12   | Diode                      | 单向导通器               | 1   |        |

**ENGINE- CRANKCASE COVER IC390-B**

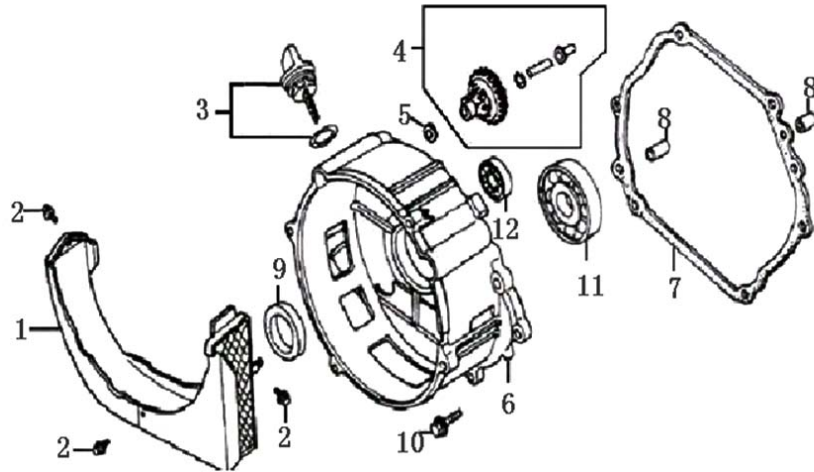


| POS | REF       | DESCRIPTION                                     | 配件                                    | QTY | Remark |
|-----|-----------|-------------------------------------------------|---------------------------------------|-----|--------|
| 1   | IC390-B01 | Cover dust                                      | 电机风罩                                  | 1   |        |
| 2   | IC390-B02 | Flange bolt M5*8                                | 法兰螺栓M5*8                              | 3   |        |
| 3   | IC390-B03 | Oil filter cap                                  | 机油尺组件                                 | 1   |        |
| 4   | IC390-B04 | Gouvernor assy                                  | 调速齿轮部件                                | 1   |        |
| 5   | IC390-B05 | Washer plain $\phi 6 \times \phi 12 \times 1.5$ | 平垫 $\phi 6 \times \phi 12 \times 1.5$ | 1   |        |
| 6   | IC390-B06 | Crankcase cover assy                            | 曲轴箱盖                                  | 1   |        |
| 7   | IC390-B07 | Crankcase cover packing                         | 曲轴箱密封垫                                | 1   |        |
| 8   | IC390-B08 | Dowel pin $\phi 8 \times 14$                    | 定位销 $\phi 8 \times 14$                | 2   |        |
| 9   | IC390-B09 | Oil seal $35 \times 52 \times 7$                | 油封 $35 \times 52 \times 7$            | 1   |        |
| 10  | IC390-B10 | Flange bolt M8*40                               | 法兰螺栓M8*40                             | 7   |        |
| 11  | IC390-B11 | Radial ball bearing 6207                        | 轴承6207                                | 1   |        |
| 12  | IC390-B12 | Radial ball bearing 6202                        | 轴承 6202                               | 1   |        |

#### ENGINE- CYLINDER HEAD IC390-C

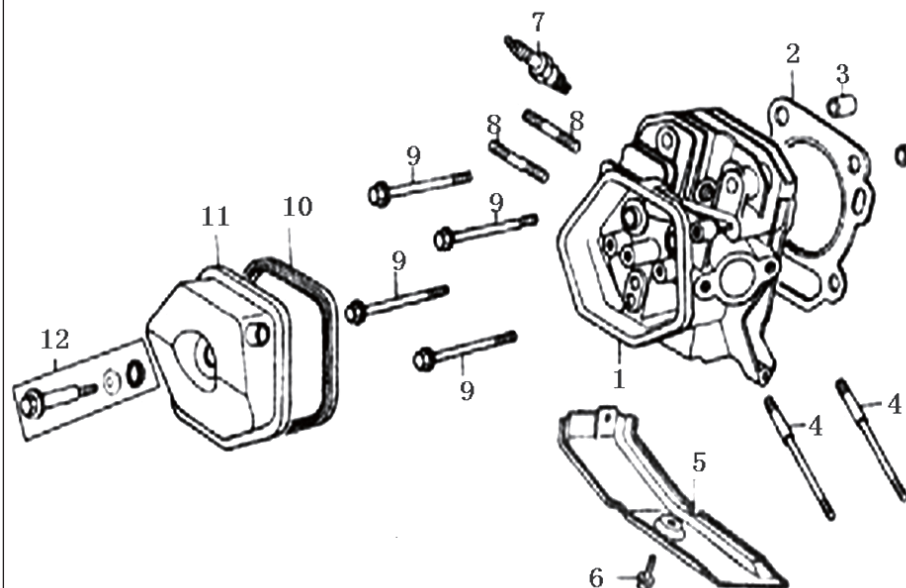


| POS | REF         | DESCRIPTION              | 配件              | QTY | Remark |
|-----|-------------|--------------------------|-----------------|-----|--------|
| 1   | IC390-C01   | Cylinder head comp188F   | 气缸头总成 188F      | 1   |        |
| 2   | IC390-C02   | Cylinder head gasket188F | 气缸头密封垫 188F     | 1   |        |
| 3   | IC390-C03   | Dowel pinφ12*20          | 定位销 φ 12*20     | 2   |        |
| 4   | IC390-C04   | Stud bolt M6-8*135       | 进气门双头螺栓M6-8*135 | 2   |        |
| 4-1 | IC390-C04-1 | Stud bolt M6-8*110       | 进气门双头螺栓M6-8*110 | 2   |        |
| 5   | IC390-C05   | Air-leading cover        | 气缸头导风罩          | 1   |        |
| 6   | IC390-C06   | Flange bolt M6*12        | 法兰螺栓M6*12       | 1   |        |
| 7   | IC390-C07   | Spark plug               | 火花塞             | 1   |        |
| 8   | IC390-C08   | Stud bolt AM8*45         | 单机双头螺栓AM8*45    | 2   |        |
| 8-1 | IC390-C08-1 | Stud bolt AM8*35         | 机组双头螺栓AM8*35    | 2   |        |
| 9   | IC390-C09   | Stud bolt M10*80         | 气缸头螺栓M10*80     | 4   |        |
| 10  | IC390-C10   | Head cover packing       | 气缸盖密封垫          | 1   |        |
| 11  | IC390-C11   | Cylinder cover comp      | 气缸盖组件           | 1   |        |
| 12  | IC390-C12   | Non standard bolt M6*61  | 非标组合螺栓M6*61     | 1   |        |

**ENGINE - CRANKSHAFT, CONNECTING ROD IC390-D**

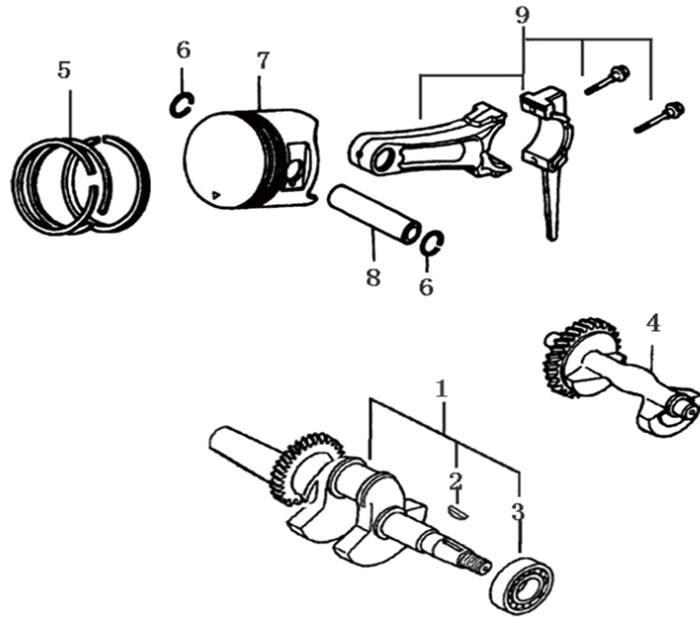


| POS | REF       | DESCRIPTION             | 配件        | QTY | Remark |
|-----|-----------|-------------------------|-----------|-----|--------|
| 1   | IC390-D01 | Crankshaft comp 188F-V  | 曲轴188F-V  | 1   |        |
| 2   | IC390-D02 | Half-circle key         | 半圆键       | 1   |        |
| 3   | IC390-D03 | Bearing 6207            | 轴承6207    | 1   |        |
| 4   | IC390-D04 | Balancer shaft          | 平衡轴       | 1   |        |
| 5   | IC390-D05 | Ring comp188F           | 活塞环组件188F | 1   |        |
| 6   | IC390-D06 | Piston pin clip         | 活塞销挡圈     | 2   |        |
| 7   | IC390-D07 | Piston188F              | 活塞188F    | 1   |        |
| 8   | IC390-D08 | Piston pin188F          | 活塞销188F   | 1   |        |
| 9   | IC390-D09 | Connecting rod assy188F | 连杆188F    | 1   |        |

**ENGINE- IC390 VALVE, ROCKER ARM,  
CAMSHAFT ASSY IC390-E**

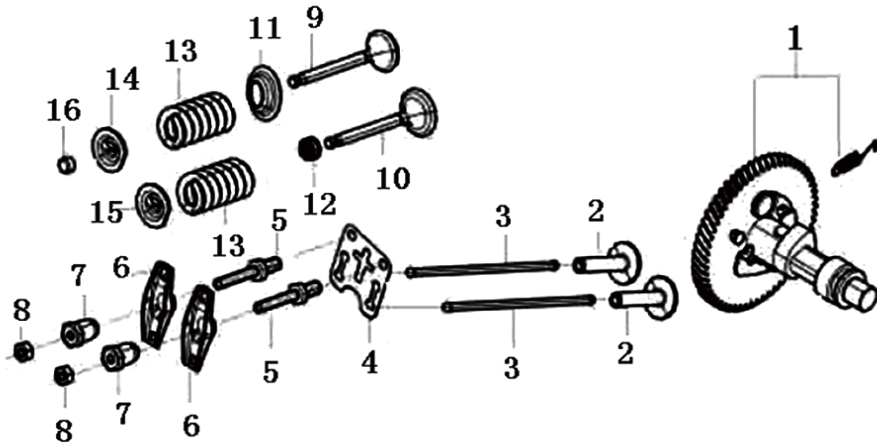


| POS | REF       | DESCRIPTION                               | 配件       | QTY | Remark |
|-----|-----------|-------------------------------------------|----------|-----|--------|
| 1   | IC390-E01 | Camshaft assy188F                         | 凸轮轴188F  | 1   |        |
| 2   | IC390-E02 | Valve lifter                              | 挺柱       | 2   |        |
| 3   | IC390-E03 | Push rod                                  | 推杆       | 2   |        |
| 4   | IC390-E04 | Push rod guid, plate                      | 推杆导架组合   | 1   |        |
| 5   | IC390-E05 | Adjusting bolt, valve                     | 气门摇臂双头螺栓 | 2   |        |
| 6   | IC390-E06 | Valve rocker arm                          | 摇臂       | 2   |        |
| 7   | IC390-E07 | Adjusting bolt, valve clearance           | 气门调节螺母   | 2   |        |
| 8   | IC390-E08 | Solider bolt, valve                       | 气门锁紧螺母   | 2   |        |
| 9   | IC390-E09 | Exhaust valve188F                         | 排气门188F  | 1   |        |
| 10  | IC390-E10 | Intake valve188F                          | 进气门188F  | 1   |        |
| 11  | IC390-E11 | Retainer ( downside) Exhaust Valve spring | 排气门弹簧调整座 | 1   |        |
| 12  | IC390-E12 | Seat, valve spring                        | 挡油罩      | 1   |        |
| 13  | IC390-E13 | Valve spring                              | 气门弹簧     | 2   |        |
| 14  | IC390-E14 | Exhaust valve spring retainer             | 排气门弹簧座   | 1   |        |
| 15  | IC390-E15 | Intake valve spring retainer              | 进气门弹簧座   | 1   |        |
| 16  | IC390-E16 | Valve rotator                             | 排气门弹簧垫块  | 1   |        |

#### ENGINE- CARBURETOR ASSY IC390-F

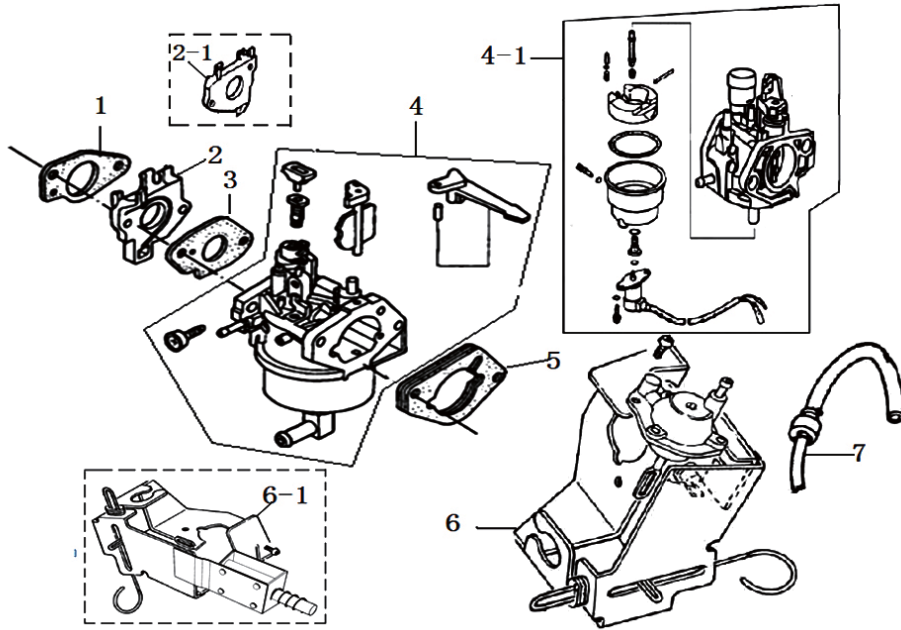


| POS | REF         | DESCRIPTION                            | 配件           | QTY | Remark |
|-----|-------------|----------------------------------------|--------------|-----|--------|
| 1   | IC390-F01   | Packing, insulator                     | 进气口密封垫       | 1   |        |
| 2   | IC390-F02   | Insulator, carburetor                  | 单机化油器隔热板     | 1   |        |
| 2-1 | IC390-F02-1 | Insulator, carburetor                  | 机组化油器隔热板     | 1   |        |
| 3   | IC390-F03   | Packing, carburetor                    | 化油器密封垫       | 1   |        |
| 4   | IC390-F04   | Carburetor ASSY188F                    | 单机型化油器总成188F | 1   |        |
| 4-1 | IC390-F04-1 | Carburetor ASSY188F                    | 机组型化油器总成188F | 1   |        |
| 5   | IC390-F05   | Packing air cleaner                    | 空滤器密封垫       | 1   |        |
| 6   | IC390-F06   | Resistance air damper control assembly | 阻风门控制总成      | 1   |        |
| 6-1 | IC390-F06-1 | Resistance air damper control assembly | 自动阻风门控制总成    | 1   |        |
| 7   | IC390-F07   | One-way valve components               | 单向阀组件        | 1   |        |

**ENGINE- AIR CLEANER ASSY IC390-G**

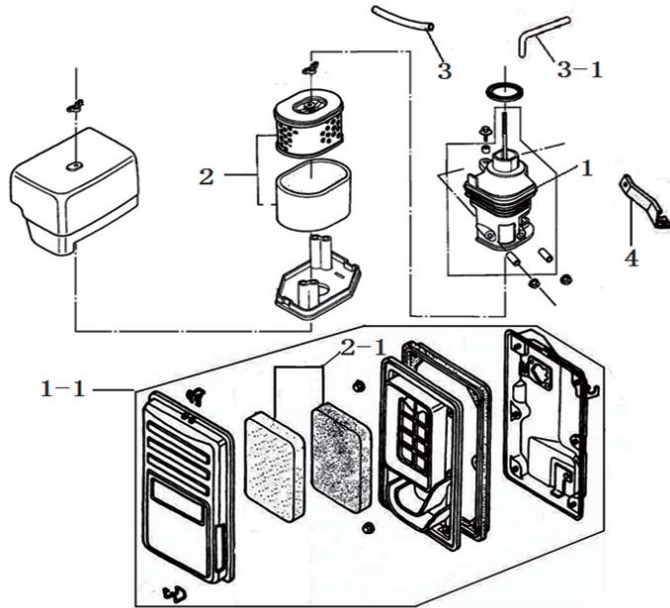


| POS | REF         | DESCRIPTION          | 配件        | QTY | Remark |
|-----|-------------|----------------------|-----------|-----|--------|
| 1   | IC390-G01   | Air cleaner ASSY     | 单机空气滤清器总成 | 1   |        |
| 1-1 | IC390-G01-1 | Air cleaner ASSY     | 机组空气滤清器总成 | 1   |        |
| 2   | IC390-G02   | Element, air cleaner | 单机空滤器滤芯   | 1   |        |
| 2-1 | IC390-G02-1 | Element, air cleaner | 机组空滤器滤芯   | 1   |        |
| 3   | IC390-G03   | Breather             | 单机通气管     | 1   |        |
| 3-1 | IC390-G03-1 | Breather             | 机组通气管     | 1   |        |
| 4   | IC390-G04   | Empty filter stents  | 机组空滤器支架   | 1   |        |

**ENGINE- IGNITION COIL , FLYWHEEL IC390-H**

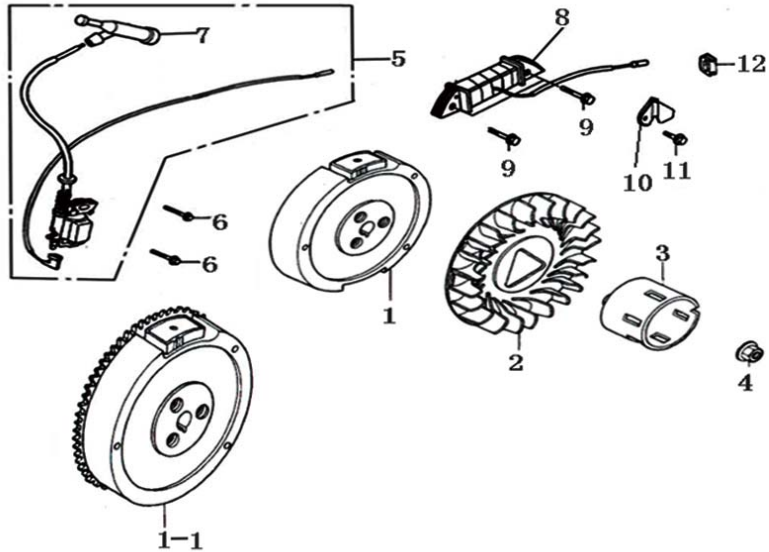


| POS | REF         | DESCRIPTION            | 配件          | QTY | Remark |
|-----|-------------|------------------------|-------------|-----|--------|
| 1   | IC390-H01   | Flywheel               | 手启动飞轮       | 1   |        |
| 1-1 | IC390-H01-1 | Flywheel               | 电启动飞轮       | 1   |        |
| 2   | IC390-H02   | Flywheel fan           | 飞轮风扇        | 1   |        |
| 3   | IC390-H03   | Starting cup           | 启动杯         | 1   |        |
| 4   | IC390-H04   | NutM16×1.5             | 螺母M16 × 1.5 | 1   |        |
| 5   | IC390-H05   | Ignition coil assembly | 点火线圈总成      | 1   |        |
| 6   | IC390-H06   | Flange bolt M6×25      | 法兰螺栓M6 × 25 | 2   |        |
| 7   | IC390-H07   | Spark plug cap         | 火花塞帽        | 1   |        |
| 8   | IC390-H08   | Charging coil          | 充电线圈部件      | 1   |        |
| 9   | IC390-H09   | Flange bolt M6×30      | 法兰螺栓M6 × 30 | 2   |        |
| 10  | IC390-H10   | Linking piece          | 线束压板        | 1   |        |
| 11  | IC390-H11   | Flange bolt M6×12      | 法兰螺栓M6 × 12 | 1   |        |
| 12  | IC390-H12   | Positioning line card  | 定位线卡        | 1   |        |

#### ENGINE- FAN COVER IC390-I

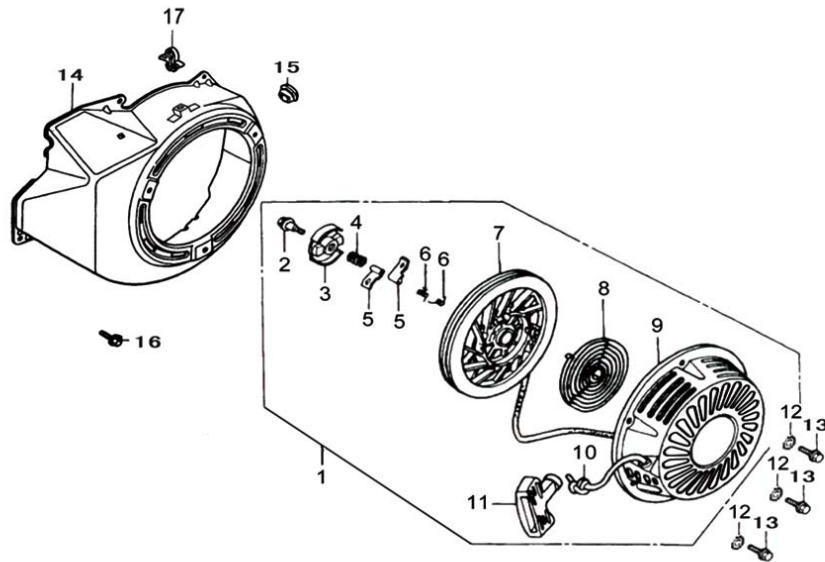


| POS | REF       | DESCRIPTION                | 配件        | QTY | Remark |
|-----|-----------|----------------------------|-----------|-----|--------|
| 1   | IC390-I01 | Recoil starter assy        | 启动器总成     | 1   |        |
| 2   | IC390-I02 | Setting screw              | 轴位螺钉      | 1   |        |
| 3   | IC390-I03 | Ratchet guide              | 棘爪导盘      | 1   |        |
| 4   | IC390-I04 | Compression spring         | 压簧        | 1   |        |
| 5   | IC390-I05 | Starter ratchet            | 棘爪        | 2   |        |
| 6   | IC390-I06 | Twist spring               | 扭簧        | 2   |        |
| 7   | IC390-I07 | Recoil starter reel        | 启动器卷轮     | 1   |        |
| 8   | IC390-I08 | Starting reposition spring | 启动复位弹簧    | 1   |        |
| 9   | IC390-I09 | Recoil starter case comp   | 启动器外罩     | 1   |        |
| 10  | IC390-I10 | Recoil starter rope        | 启动器拉绳     | 1   |        |
| 11  | IC390-I11 | Recoil starter knob        | 启动器拉手     | 1   |        |
| 12  | IC390-I12 | Washer plainφ6             | 平垫 φ6     | 3   |        |
| 13  | IC390-I13 | Flange bolt M6*8           | 法兰螺栓M6*8  | 3   |        |
| 14  | IC390-I14 | Fan, cover comp            | 风扇罩       | 1   |        |
| 15  | IC390-I15 | Rubber bulkhead            | 橡胶堵头      | 1   |        |
| 16  | IC390-I16 | Flange bolt M6*12          | 法兰螺栓M6*12 | 5   |        |
| 17  | IC390-I17 | Positioning line card      | 定位线卡      | 2   |        |

#### ENGINE - SPEED GOVERNOR IC390-J

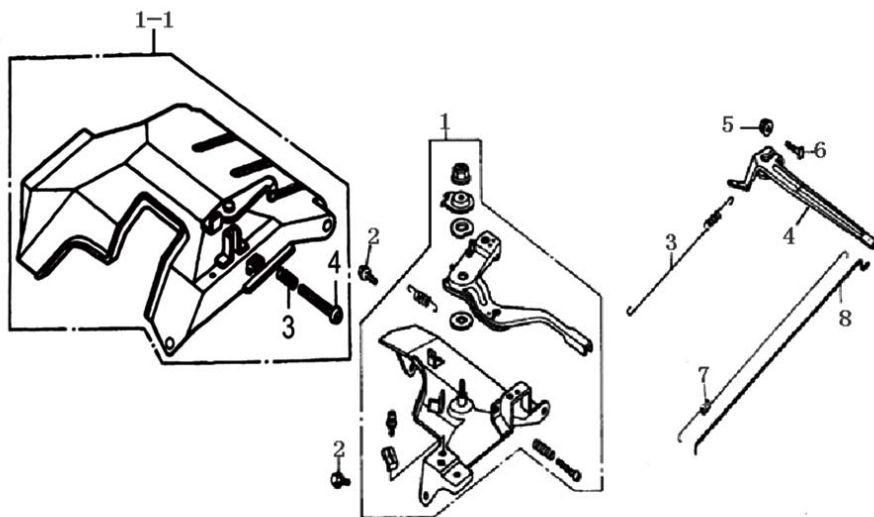


| POS | REF         | DESCRIPTION             | 配件             | QTY | Remark |
|-----|-------------|-------------------------|----------------|-----|--------|
| 1   | IC390-J01   | Control assy            | 单机调速架组件        | 1   |        |
| 1-1 | IC390-J01-1 | Control assy            | 机组调速架组件        | 1   |        |
| 2   | IC390-J02   | Flange bolt M6*12       | 法兰螺栓M6*12      | 2   |        |
| 3   | IC390-J03   | Governor spring 188F    | 调速弹簧188F32.75圈 | 1   |        |
| 4   | IC390-J04   | Governor arm            | 调速臂            | 1   |        |
| 5   | IC390-J05   | Nut, M6                 | 法兰螺母M6         | 1   |        |
| 6   | IC390-J06   | Square head screw M6x21 | 方头螺栓M6 x 21    | 1   |        |
| 7   | IC390-J07   | Throttle return spring  | 微调弹簧           | 1   |        |
| 8   | IC390-J08   | Governor rod            | 调速拉杆           | 1   |        |

ENGINE- START MOTOR IC390-K

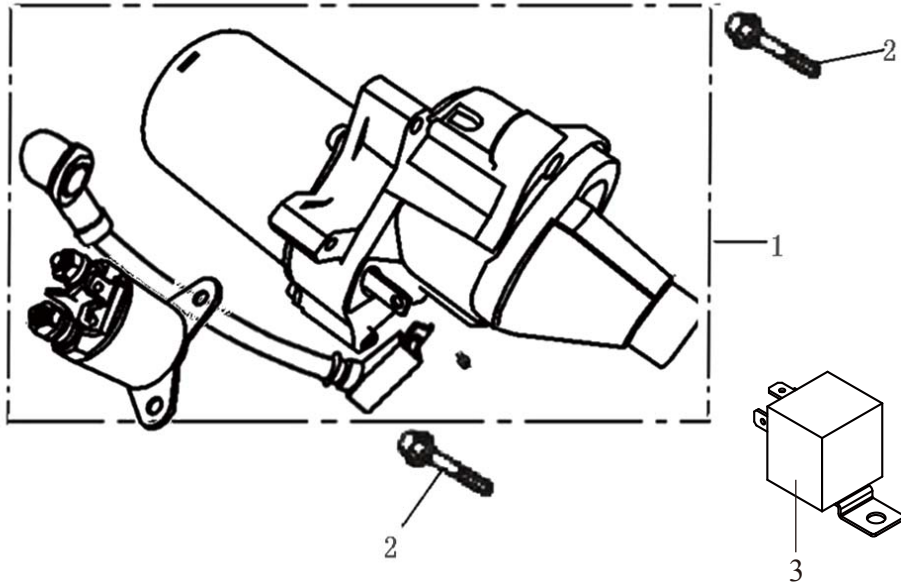


| POS | REF       | DESCRIPTION       | 配件          | QTY | Remark |
|-----|-----------|-------------------|-------------|-----|--------|
| 1   | IC390-K01 | Starting motor    | 启动电机总成188FD | 1   |        |
| 2   | IC390-K02 | Flange bolt M8×40 | 法兰螺栓M8 × 40 | 2   |        |
| 3   | IC390-K03 | Start relay       | 起动继电器       | 1   |        |

**ENGINE- FUEL TANK & MUFFLE IC390-L**

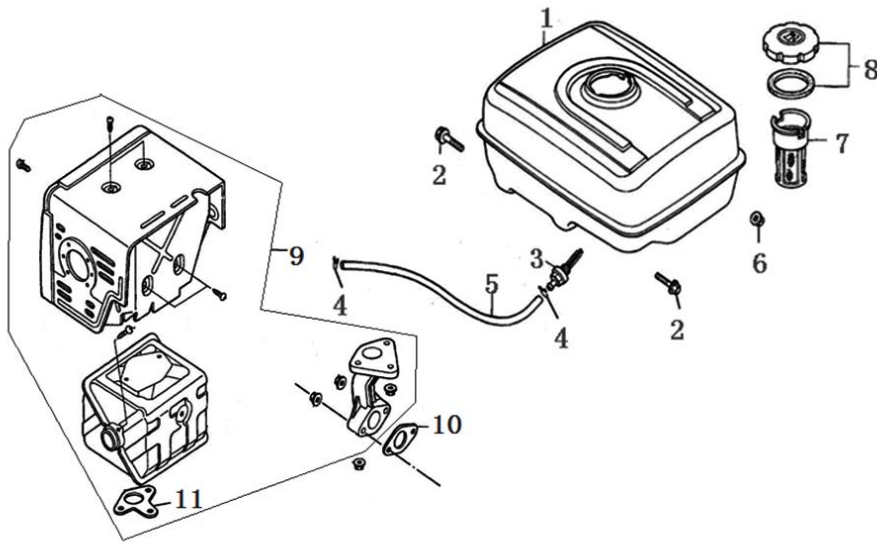


| POS | REF       | DESCRIPTION         | 配件                 | QTY | Remark |
|-----|-----------|---------------------|--------------------|-----|--------|
| 1   | IC390-L01 | Fuel Tank           | 油箱                 | 1   |        |
| 2   | IC390-L02 | Flange bolt M8×25   | 法兰螺栓M8 × 25        | 2   |        |
| 3   | IC390-L03 | Joint, fuel tank    | 出油嘴                | 1   |        |
| 4   | IC390-L04 | Clip, tube          | 油管夹                | 2   |        |
| 5   | IC390-L05 | Tube, fuelφ4×φ8×250 | 油管 φ 4 × φ 8 × 250 | 1   |        |
| 6   | IC390-L06 | Nut, M8             | 法兰螺母M8             | 2   |        |
| 7   | IC390-L07 | Filter, fuel        | 滤网                 | 1   |        |
| 8   | IC390-L08 | Fuel filler cap     | 油箱盖                | 1   |        |
| 9   | IC390-L09 | Muffler ASSY        | 消声器总成              | 1   |        |
| 10  | IC390-L10 | Pad, Exhaust        | 排气口密封垫             | 1   |        |
| 11  | IC390-L11 | Gasket, Muffler     | 消声器密封垫             | 1   |        |

#### ALTERNATOR IC390-M

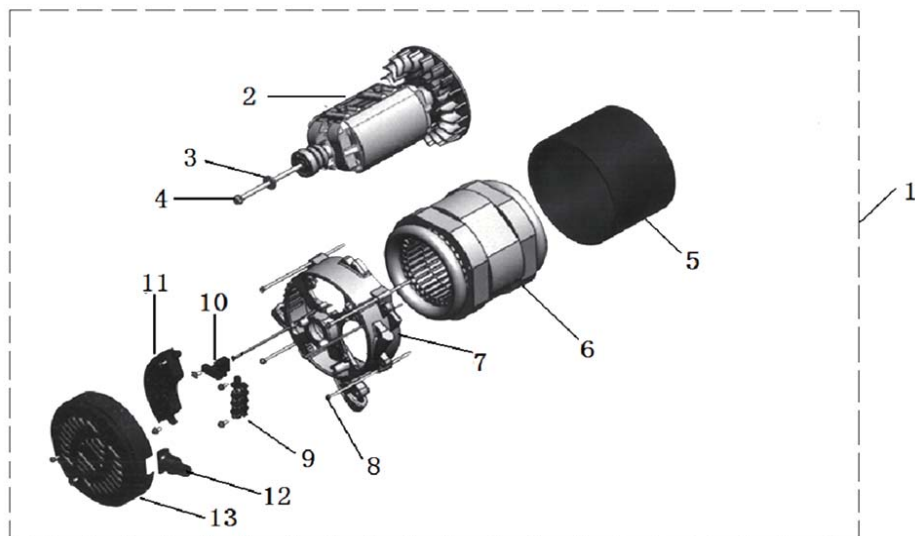


| POS  | REF         | DESCRIPTION                      | 配件                       | QTY | Remark |
|------|-------------|----------------------------------|--------------------------|-----|--------|
| 1    | IC390-M01   | 5KVA Alternator ASSY(LE)         | 5KVA单相开架电机总成             | 1   |        |
| 1-1  | IC390-M01-1 | 5KVA Alternator ASSY(LE-3)       | 5KVA三相开架电机总成             | 1   |        |
| 2    | IC390-M02   | 5KVA Rotor(LE/)                  | 5KVA单相电机转子               | 1   |        |
| 2-1  | IC390-M02-1 | 5KVA Rotor(LE-3)                 | 5KVA三相电机转子               | 1   |        |
| 3    | IC390-M03   | Flat washer $\Phi 10$            | $\Phi 10$ 平垫             | 1   |        |
| 4    | IC390-M04   | 5KVA Axis bolt                   | 5KVA中心轴螺栓                | 1   |        |
| 5    | IC390-M05   | 5KVA Stator cover                | 5KVA定子护圈                 | 1   |        |
| 6    | IC390-M06   | 5KVA Stator(LE)                  | 5KVA单相电机定子               | 1   |        |
| 6-1  | IC390-M06-1 | 5KVA Stator(LE-3)                | 5KVA三相电机定子               | 1   |        |
| 7    | IC390-M07   | Real round cover                 | 5KVA电机后端盖                | 1   |        |
| 8    | IC390-M08   | 5KVA Frange bolt M6 $\times$ 170 | 5KVA法兰螺栓 M6 $\times$ 170 | 4   |        |
| 9    | IC390-M09   | Terminal plate(LE)               | 单相接线排                    | 1   |        |
| 9-1  | IC390-M09-1 | Terminal plate(LE-3)             | 三相接线排                    | 1   |        |
| 10   | IC390-M10   | Brush kit                        | 5KVA碳刷                   | 1   |        |
| 11   | IC390-M11   | AVR(LE/SE)                       | 单相AVR                    | 1   |        |
| 11-1 | IC390-M11-1 | AVR(LE-3/SE-3)                   | 三相AVR                    | 1   |        |
| 12   | IC390-M12   | Rubber cable cover               | 电机出线护套                   | 1   |        |
| 13   | IC390-M13   | Real end cover                   | 电机进风罩                    | 1   |        |

**FRAME IC390-N**

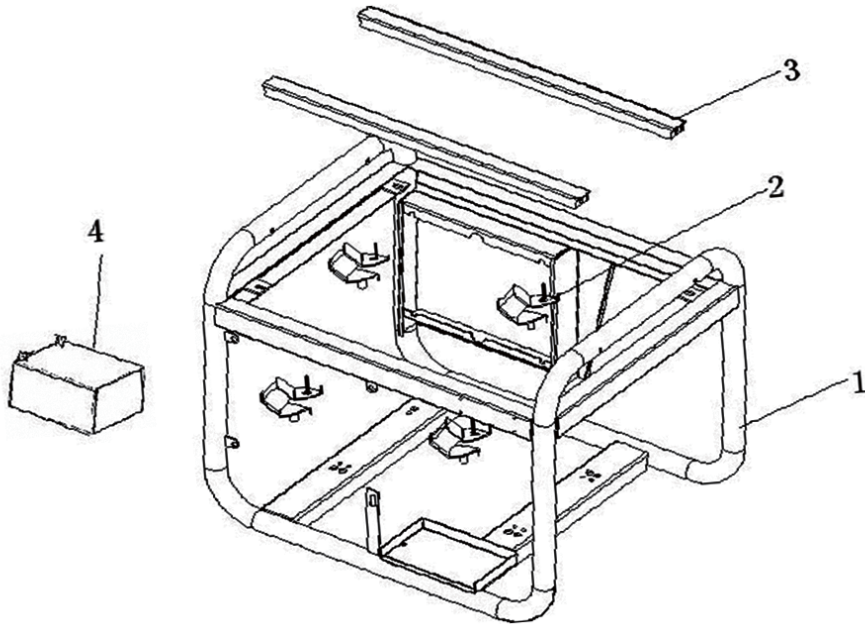


| POS | REF         | DESCRIPTION            | 配件          | QTY | Remark |
|-----|-------------|------------------------|-------------|-----|--------|
| 1   | IC390-N01   | 5KVA (L)Frame          | 5KVA手起动机架总成 | 1   |        |
| 1-1 | IC390-N01-1 | 5KVA(LE) Frame         | 5KVA电起动机架总成 | 1   |        |
| 2   | IC390-N02   | Absorber-5kw open type | 5KW减震垫      | 4   |        |
| 3   | IC390-N03   | 5KVA Upper support     | 5KVA横梁      | 2   |        |
| 4   | IC390-N04   | 14Ah Battery           | 14AH电瓶      | 1   |        |

## FUEL TANK IC390-O

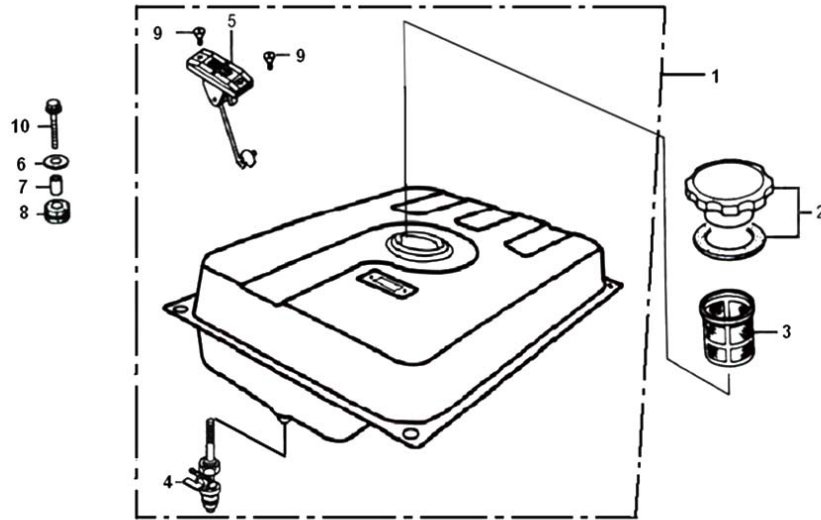


| POS | REF       | DESCRIPTION                                  | 配件                                  | QTY | Remark |
|-----|-----------|----------------------------------------------|-------------------------------------|-----|--------|
| 1   | IC390-O01 | 5KW Fuel tank                                | 5KW汽油机油箱                            | 1   |        |
| 2   | IC390-O02 | Fuel tank cap                                | 油箱盖                                 | 1   |        |
| 3   | IC390-O03 | Fuel filter cup                              | 燃油滤网                                | 1   |        |
| 4   | IC390-O04 | Fuel cock (outer thread)                     | 油开关(外螺纹)                            | 1   |        |
| 5   | IC390-O05 | Fuel level indicator                         | 油标部件                                | 1   |        |
| 6   | IC390-O06 | Flat washer $\phi 6 \times \phi 25 \times 2$ | 平垫 $\phi 6 \times \phi 25 \times 2$ | 4   |        |
| 7   | IC390-O07 | Tank absorber bush                           | 油箱衬套                                | 4   |        |
| 8   | IC390-O08 | Tank absorber                                | 油箱减震垫                               | 4   |        |
| 9   | IC390-O09 | Screws M5 $\times$ 12                        | 十字槽沉头螺钉M5 $\times$ 12               | 2   |        |
| 10  | IC390-O10 | Flange bolt M6 $\times$ 25                   | 法兰螺栓M6 $\times$ 25                  | 4   |        |

**MUFFLER IC390-P**

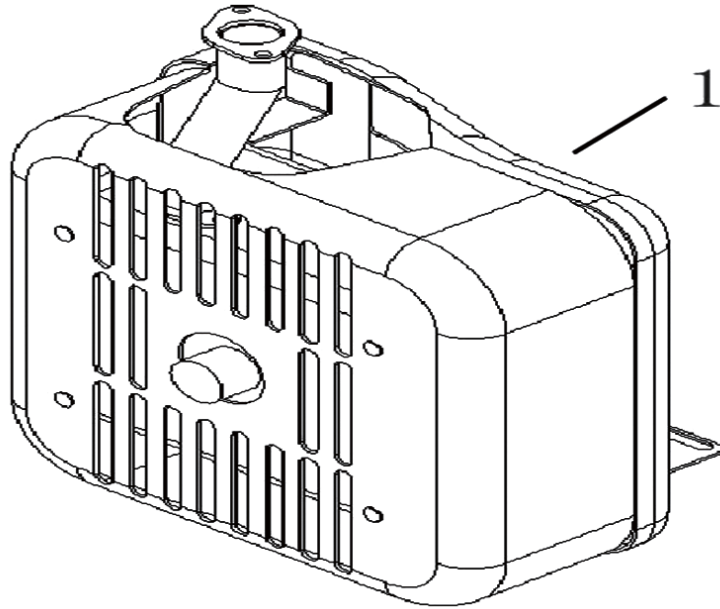

| POS | REF       | DESCRIPTION  | 配件      | QTY | Remark |
|-----|-----------|--------------|---------|-----|--------|
| 1   | IC390-P01 | 5KVA Muffler | 5KVA消声器 | 1   |        |

#### CONTROL PANEL IC390-Q

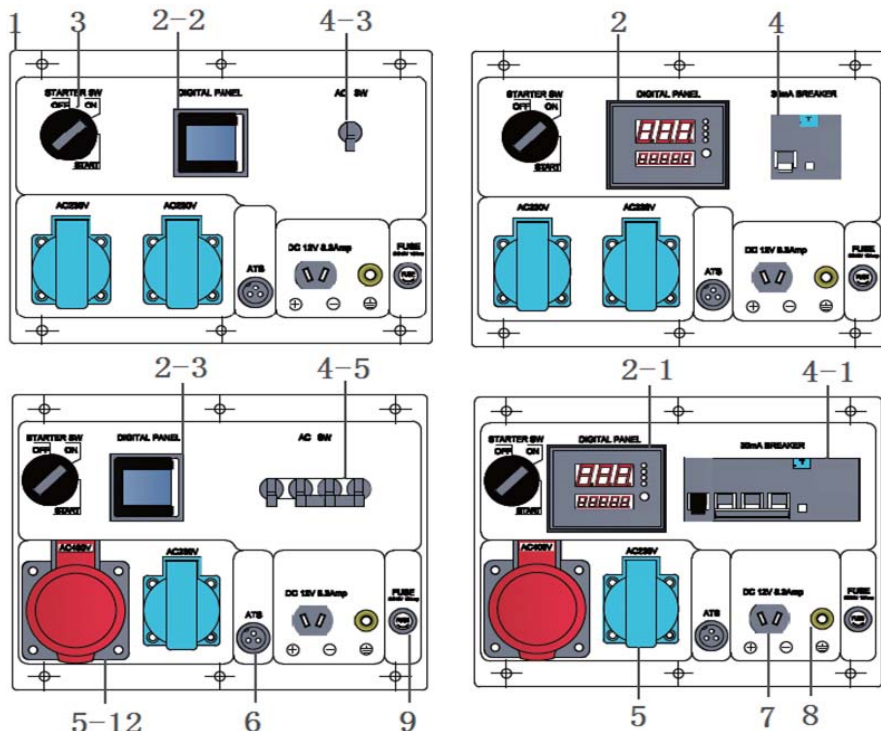

| POS  | REF          | DESCRIPTION                                    | 配件              | QTY | Remark |
|------|--------------|------------------------------------------------|-----------------|-----|--------|
| 1    | IC390-Q01    | Panel plate                                    | 面板              | 1   |        |
| 2    | IC390-Q02    | LED5 display(LE/SE)                            | LED5数显表         | 1   |        |
| 2-1  | IC390-Q02-1  | LED5 display(LE-3/SE-3)                        | LED5数显表         | 1   |        |
| 2-2  | IC390-Q02-2  | LED3 display(LE/SE)                            | LED3数显表         | 1   |        |
| 2-3  | IC390-Q02-3  | LED3 display(LE-3/SE-3)                        | LED3数显表         | 1   |        |
| 2-4  | IC390-Q02-4  | Voltage meter(LE/SE)                           | 电压表             | 1   |        |
| 2-5  | IC390-Q02-5  | Voltage meter(LE-3/SE-3)                       | 电压表             | 1   |        |
| 3    | IC390-Q03    | Start lock                                     | 电门锁             | 1   |        |
| 3-1  | IC390-Q03-1  |                                                | 船型开关            | 1   |        |
| 4    | IC390-Q04    | Leakage breaker 1P+N                           | 1P+N漏电开关        | 1   |        |
| 4-1  | IC390-Q04-1  | Leakage breaker 3P+N                           | 3P+N漏电开关        | 1   |        |
| 4-2  | IC390-Q04-2  | Breaker 1P                                     | 1P空开            | 1   |        |
| 4-3  | IC390-Q04-3  | Black breaker 1P                               | 1P黑色过载开关        | 1   |        |
| 4-4  | IC390-Q04-4  | Black breaker 2P                               | 2P黑色过载开关        | 1   |        |
| 4-5  | IC390-Q04-5  | Black breaker 3P                               | 3P黑色过载开关        | 1   |        |
| 5    | IC390-Q05    | Europe socket 16A                              | 德插16A           | 1   |        |
| 5-1  | IC390-Q05-1  | Black Australia socket 15A                     | 黑色澳插15A         | 1   |        |
| 5-2  | IC390-Q05-2  | Black Argentina socket 15A                     | 阿根廷插15A         | 1   |        |
| 5-3  | IC390-Q05-3  | IP67 Australia socket 15A                      | 防水澳插15A         | 1   |        |
| 5-4  | IC390-Q05-4  | 110-130V Europe yellow socket 16A              | 110-130V黄色欧插16A | 1   |        |
| 5-5  | IC390-Q05-5  | 110-130V Europe yellow socket 32A              | 110-130V黄色欧插32A | 1   |        |
| 5-6  | IC390-Q05-6  | 220-250V Europe blue socket 16A                | 220-250V蓝色欧插16A | 1   |        |
| 5-7  | IC390-Q05-7  | 220-250V Europe blue socket 32A                | 220-250V蓝色欧插32A | 1   |        |
| 5-8  | IC390-Q05-8  | American three pins socket 20A                 | 三孔美式防松插20A      | 1   |        |
| 5-9  | IC390-Q05-9  | American double socket 20A                     | 双小美插20A         | 1   |        |
| 5-10 | IC390-Q05-10 | American four holes socket 30A                 | 四孔美式防松插30A      | 1   |        |
| 5-11 | IC390-Q05-11 | Industrial four holes socket 3-phase 32A       | 三相四孔工业插32A      | 1   |        |
| 5-12 | IC390-Q05-12 | Industrial five holes socket 3-phase 16A       | 三相五孔工业插16A      | 1   |        |
| 5-13 | IC390-Q05-13 | IP67 Australia socket 3pahse 20A               | 三相防水澳式插座20A     | 1   |        |
| 6    | IC390-Q06    | ATS socket                                     | ATS插座 ( 母头 )    | 1   |        |
| 7    | IC390-Q07    | V type 12V/DC connector                        | 12V V型插座        | 1   |        |
| 7-1  | IC390-Q07-1  | T-type 12V/DC connector                        | 12V T型插座        | 1   |        |
| 7-2  | IC390-Q07-2  | V type 12V/DC terminals(Both of red and black) | 12V接线柱红黑        | 1   |        |
| 8    | IC390-Q08    | Grounding nut                                  | 接地螺母            | 1   |        |
| 9    | IC390-Q09    | Fuse kit                                       | 保险丝座            | 1   |        |
| 10   | IC390-Q10    | ATS moudle                                     | ATS模块           | 1   |        |
| 10-1 | IC390-Q10-1  | Remote control moudle                          | 遥控模块            | 1   |        |
| 10-2 | IC390-Q10-2  | ATS+remode control moudle                      | 遥控+ATS模块        | 1   |        |
| 11   | IC390-Q11    | Rectifier 12V                                  | 整流桥12V          | 1   |        |
| 12   | IC390-Q12    |                                                | 二极管10A          | 1   |        |
| 13   | IC390-Q13    | Relay 40A                                      | 转换继电器 40A       | 1   |        |
| 14   | IC390-Q14    | Hours timer                                    | 计时器             | 1   |        |
| 15   | IC390-Q15    | Button switch                                  | 钮子开关            | 1   |        |

