



# HYUNDAI HY 100



Pos	Code	Part	Pos	Code	Part
1	HY100-1	Starter comp, recoil	64	HY100-64	Spring, throttle return
2	HY100-2	Engine switch	65	HY100-65	Rod, governor
3	HY100-3	Fan, cover comp	66	HY100-66	Nut, M6
4	HY100-4	Shroud comp	67	HY100-67	Case comp, air cleaner
5	HY100-5	Flange nut M14	68	HY100-68	Separator, air cleaner
6	HY100-6	Pulley, starter	69	HY100-69	Element, air cleaner
7	HY100-7	Fan, cooling	70	HY100-70	Cover, air cleaner
8	HY100-8	Flywheel comp	71	HY100-71	Nut, M6
9	HY100-9	Plate, side	72	HY100-72	Clip, tube
10	HY100-10	Diode	73	HY100-73	Tube, fuel
11	HY100-11	Flange bolt M6×12	74	HY100-74	Rubber, supporter
12	HY100-12	Coil assy. ignition	75	HY100-75	Flange bolt M6×25
13	HY100-13	Flange bolt M6×25	76	HY100-76	Joint, fuel tank
14	HY100-14	Bolt, drain lug	77	HY100-77	Tank fuel
15	HY100-15	Washer, drain lug	78	HY100-78	Fuel filler cap
16	HY100-16	Oil seal, 25×41.25×6	79	HY100-79	Filter, fuel
17	HY100-17	Crank case assy.	80	HY100-80	Screw, tapping M5×8
18	HY100-18	Carburetor assy.	81	HY100-81	Protector, muffler
19	HY100-19	Packing, carburetor	82	HY100-82	Muffler
20	HY100-20	Insulator, carburetor	83	HY100-83	Arrester, spark
21	HY100-21	Packing, insulator	84	HY100-84	Nut, M8
22	HY100-22	Lever comp, choke	85	HY100-85	Casket EX. Pipe
23	HY100-23	Packing air cleaner	86	HY100-86	Crankshaft comp
24	HY100-24	Bolt head, 6×112	87	HY100-87	Flange bolt M6×8
25	HY100-25	Head comp, cylinder	88	HY100-88	Drum wheel
26	HY100-26	Pin, dowel, 10×16	89	HY100-89	Muffler ASSY
27	HY100-27	Casket, cylinder head	90	HY100-90	Air cleaner ASSY
28	HY100-28	Plug, spark	91	HY100-91	Cover, Crankcase
29	HY100-29	Bolt head, M8×32	92	HY100-92	Square head screw
30	HY100-30	Flange bolt M8×60	93	HY100-93	Carburetor ASSY
31	HY100-31	Exhaust piper	94	HY100-94	Fuel Tank ASSY
32	HY100-32	Cover comp, head	95	HY100-95	Flange plate
33	HY100-33	Breather	96	HY100-96	O ring
34	HY100-34	Arm, valve rocker assy.	97	HY100-97	Washer φ10
35	HY100-35	Plate, push rod guide	98	HY100-98	Screw M10×32
36	HY100-36	Rod, push	99	HY100-99	Seal, water
37	HY100-37	Lifter, valve	100	HY100-100	Impellor
38	HY100-38	Camshaft assy.	101	HY100-101	Turbin
39	HY100-39	Valve, EX.	102	HY100-102	O ring 71×5.7
40	HY100-40	Valve, IN.	103	HY100-103	Pump case
41	HY100-41	Seat, valve spring	104	HY100-104	Gasket, port
42	HY100-42	Spring, valve	105	HY100-105	Washer φ8
43	HY100-43	Retainer, EX. Valve spring	106	HY100-106	Screw M8×28
44	HY100-44	Retainer, IN. Valve spring	107	HY100-107	Seal ring
45	HY100-45	Rotator, valve	108	HY100-108	Cover
46	HY100-46	Connecting rod assy.	109	HY100-109	Fixer
47	HY100-47	Clip, piston pin	110	HY100-110	Connector
48	HY100-48	Pin, piston	111	HY100-111	Seal, In & Out port
49	HY100-49	Piston	112	HY100-112	Tube, release
50	HY100-50	Ping set, piston	113	HY100-113	Tube, intake
51	HY100-51	Cap, oil hole	114	HY100-114	Seal washer
52	HY100-52	Flange bolt M8×32	115	HY100-115	Clip
53	HY100-53	Cover assy. crankcase	116	HY100-116	Filter
54	HY100-54	Pin, dowel, 8×14	117	HY100-117	Rubber, shock-absorb
55	HY100-55	Cap assy. oil filler	118	HY100-118	Screw M6×12
56	HY100-56	Packing, case cover	119	HY100-119	Screw M8×32
57	HY100-57	Governor assy.	120	HY100-120	Nut M8
58	HY100-58	Shaft, governor assy.			
59	HY100-59	Radial ball bearing (6025)			
60	HY100-60	Switch assy. oil level			
61	HY100-61	Control assy.			
62	HY100-62	Spring, governor			
63	HY100-63	Arm, governor			