


HY125Si


HYUNDAI

FIG.1 HEAD SUBASSEMBLY, CYLINDER / PLUG,SPARK (E04)

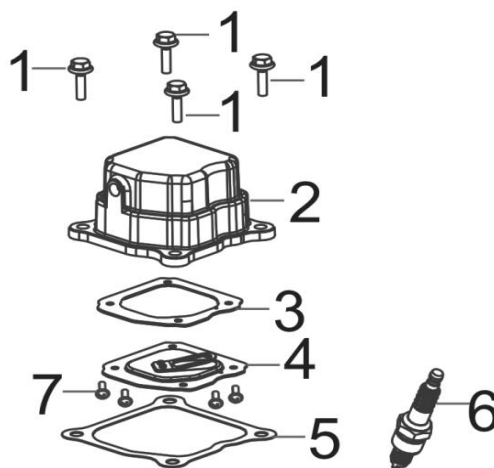

REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
E04-1	90007-0516-A1	BOLT	4	
E04-2	12410-Z900110-0000	COVER SUBASSEMBLY, CYLINDER HEAD	1	
E04-3	11332-Z900110-0000	GASKET, BREATH GROOVE	1	
E04-4	11320-Z900110-0000	REED	1	
E04-5	12004-Z900110-0000	GASKET, CYLINDER HEAD COVER	1	
E04-6	30010-Z350210-0000	PLUG, SPARK	1	
E04-7	90103-0308-51	SCREW	4	


FIG.2 CRANKCASE./COVER SUBASSEMBLY, CRANKCASE. (E01)

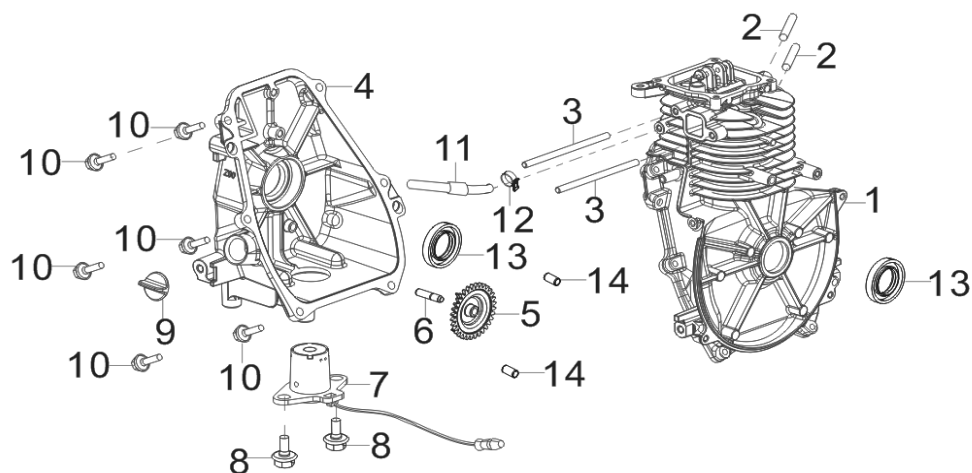

REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
E01-0	R60MI0000FF-CDB001	ENGINE R60 ASSEMBLY	1	
E01-1	11310-Z900110-0000	CRANKCASE SUBASSEMBLY.	1	
E01-2	90204-Z800210-0000	STUD	2	
E01-3	90204-Z900110-0000	STUD	2	
E01-4	11411-Z900110-0000	COVER, CRANKCASE	1	
E01-5	15041-Z900110-0000	GEAR, OIL BLENDING	1	
E01-6	15042HZ900110-0000	PIVOT, OIL BLENDING GEAR	1	
E01-7	37060-Z900110-0000	SENSOR, ENGINE OIL	1	
E01-8	90007-0612-A1	BOLT	2	
E01-9	15030-Z010120-Q500	PLUG SUBASSEMBLY, ENGINE OIL	1	
E01-10	90001-0620-01	BOLT	6	


E01-11	11017HZ900110-0000	TUBE SUBASSEMBLY, NEGATIVE PRESSURE	1	
E01-12	90685-Z020110-0000	CLAMP	1	
E01-13	90682-Z900110-0000	SEAL, OIL	2	
E01-14	90502-0814-00	PIN	2	

FIG.3 RING SET,OIL / ROD,CRANKSHAFT CONNETING (E03)

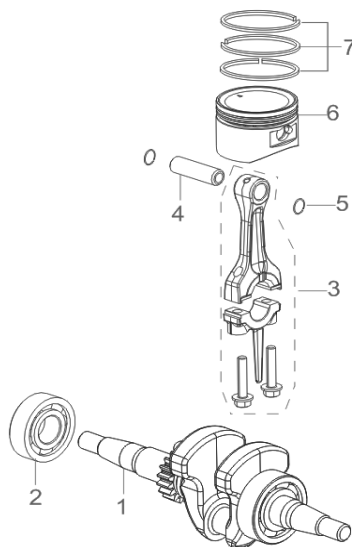

REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
E03-1	13300-Z900110-0000	CRANKSHAFT ASSY.	1	
E03-2	90547-0203-CL	BEARING , DEEP GROOVE BALL	1	
E03-3	13010-Z900110-0000	ROD, CONNECTING	1	
E03-4	13121-Z900110-0000	PIN, PISTON	1	
E03-5	13122-Z900110-0000	CLIP, PISTON PIN	2	
E03-6	13111-Z900110-0000	PISTON	1	
E03-7	13200-Z900110-0000	PISTON RINGS SET	1	


FIG.4 TRAIN,VALVE / CAMSHAFT SUBASSEMBLY (E05)

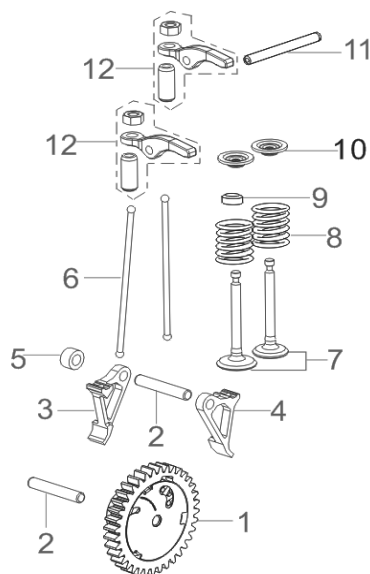

REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
E05-1	14200-Z900110-0000	CAMSHAFT ASSY.	1	
E05-2	14216-Z900110-0000	SPINDLE, CAMSHAFT	2	
E05-3	14341-Z900110-0000	ROCKER, LOWER	1	
E05-4	14341-Z900210-0000	ROCKER, LOWER	1	
E05-5	90683-Z900110-0000	BUSH	1	


E05-6	14070-Z900110-0000	LIFTER SUBASSEMBLY, VALVE	2	
E05-7	12110-Z900110-0000	VALVES SET	1	
E05-8	12103-Z900110-0000	SPRING, VALVE	2	
E05-9	12101-Z900110-0000	GUIDE, SEAL	1	
E05-10	12112-Z800110-0000	SEAT, VALVE SPRING	2	
E05-11	14330-Z900110-0000	ROCKER SHAFT	1	
E05-12	14310-Z900110-0000	ROCKER ARM, VALVE	2	

FIG.5 STARTER,RECOIL (E08)

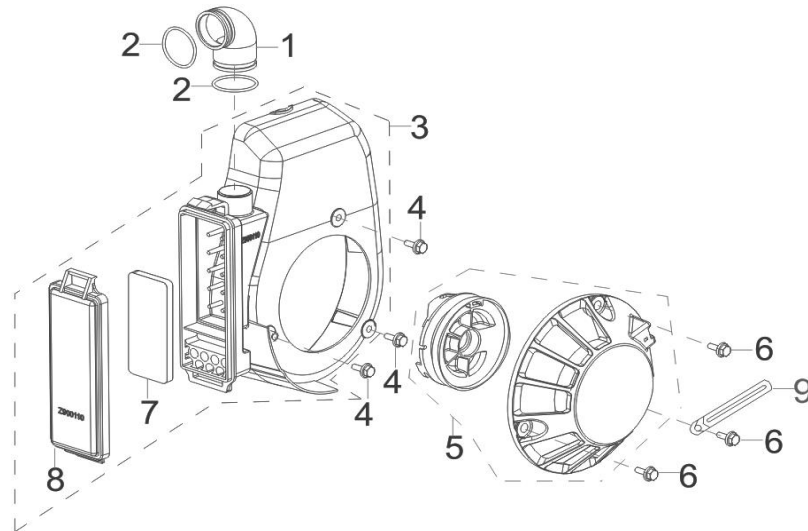

REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
E08-1	12510-Z900110-0000	TUBE, INTAKE	1	
E08-2	37073-Z900110-0000	CLIP	2	
E08-3	28110-Z900110-Q200	SHROUD	1	
E08-4	90007-0512-A1	BOLT	3	
E08-5	28200-Z900110-Q200	STARTER ASSY, RECOIL	1	
E08-6	90007-0512-A1	BOLT	3	
E08-7	17151-Z900110	ELEMENT, AIR CLEANER	1	
E08-8	17104-Z900110	COVER, AIR CLEANER CASE	1	
E08-9	90684-Z030120-0000	CLIP	1	


FIG.6 CARBURETOR ASSY. (E11)

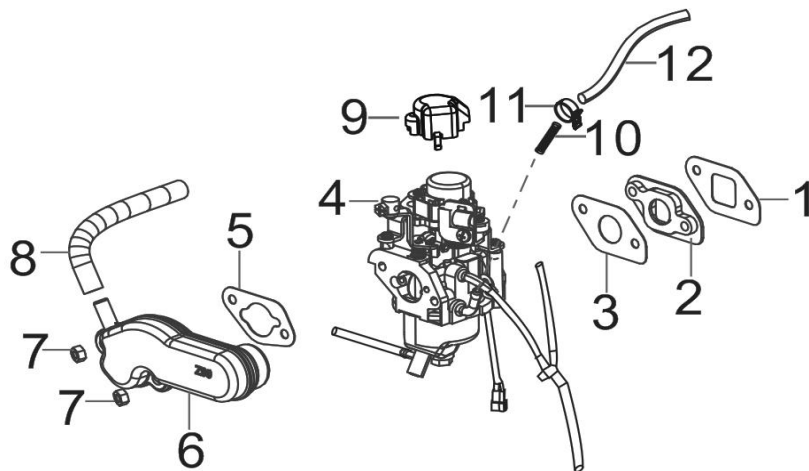

REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
E11-1	16001-Z900110-0000	GASKET, CARBURETOR	1	
E11-2	16003-Z900110-0000	PLATE, CARBURETOR INSULATOR	1	
E11-3	16002-Z900110-0000	GASKET, CARBURETOR INSULATOR	1	
E11-4	16100-Z900110-0000	CARBURETOR ASSY.	1	


E11-5	17001-Z900110-0000	GASKET, AIR CLEANER	1	
E11-6	17110-Z900110-0000	DUCT, AIR CLEANER INTAKE	1	
E11-7	90303-0600-31	NUT	2	
E11-8	17004-Z900110-0000	TUBE, BREATHER	1	
E11-9	14411-Y2V0110-0000	CAP	1	
E11-10	16652-Z800110-0000	STRAINER , FUEL	1	
E11-11	90685-Z020110-0000	CLAMP	1	
E11-12	90686-Z900110-0000	TUBE, FUEL	1	

FIG.7 FUEL TANK (F01)

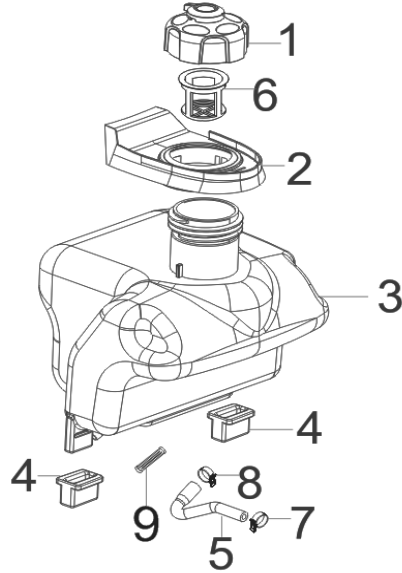


REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
F01-1	16730-Y2V0610-Q200	FUEL CAP	1	
F01-2	16641-Y2V0110-0000	SLEEVE, FILLING OIL HOLE RUBBER	1	
F01-3	16620-Y9T0110-0000	TANK, FUEL	1	
F01-4	16601-Y9T0110-0000	SLEEVE, FUEL TANK RUBBER	2	
F01-5	90686-Y9T0110-0000	TUBE, FUEL	1	
F01-6	16652-Y9T0110-0000	STRAINER , FUEL	1	
F01-7	90685-Z030220-0000	CLAMP	1	
F01-8	90685-Z030410-0000	CLAMP	1	
F01-9	16514-Y2V0110-0000	ELEMENT, STRAINER	1	

FIG.8 MUFFLER ASSY. (F04)

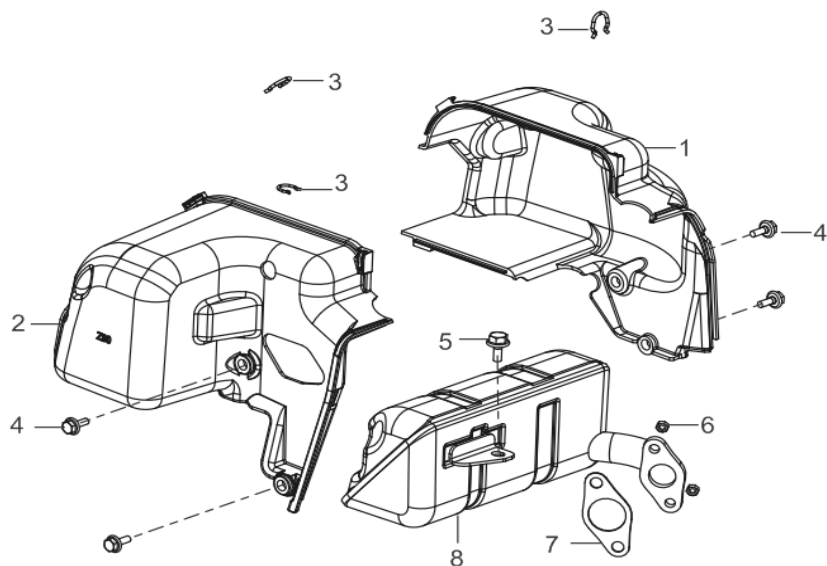


REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
F04-1	18109HZ900110-0000	SHROUD , MUFFLER	1	
F04-2	18109HZ900210-0000	SHROUD , MUFFLER	1	
F04-3	90740-Z900110-0000	COLLAR	3	
F04-4	90007-0512-A1	BOLT	4	
F04-5	90007-0612-A1	BOLT	1	
F04-6	90303-0600-31	NUT	2	
F04-7	18001-Z800110-0000	GASKET, EXHAUST OUTLET	1	
F04-8	18100-Z900110-0000	MUFFLER ASSEMBLY	1	

FIG.9 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL (E15)

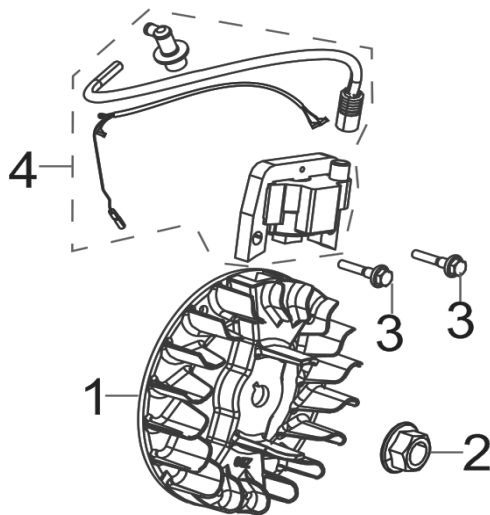


REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
E15-1	13510-Z900110-0000	FLYWHEEL SUBASSEMBLY	1	
E15-2	90306-1000-31	NUT, FLYWHEEL	1	
E15-3	90007-0520-A1	BOLT	2	
E15-4	30400-Z900110-0000	COIL, IGNITION	1	

FIG.10 (E10)

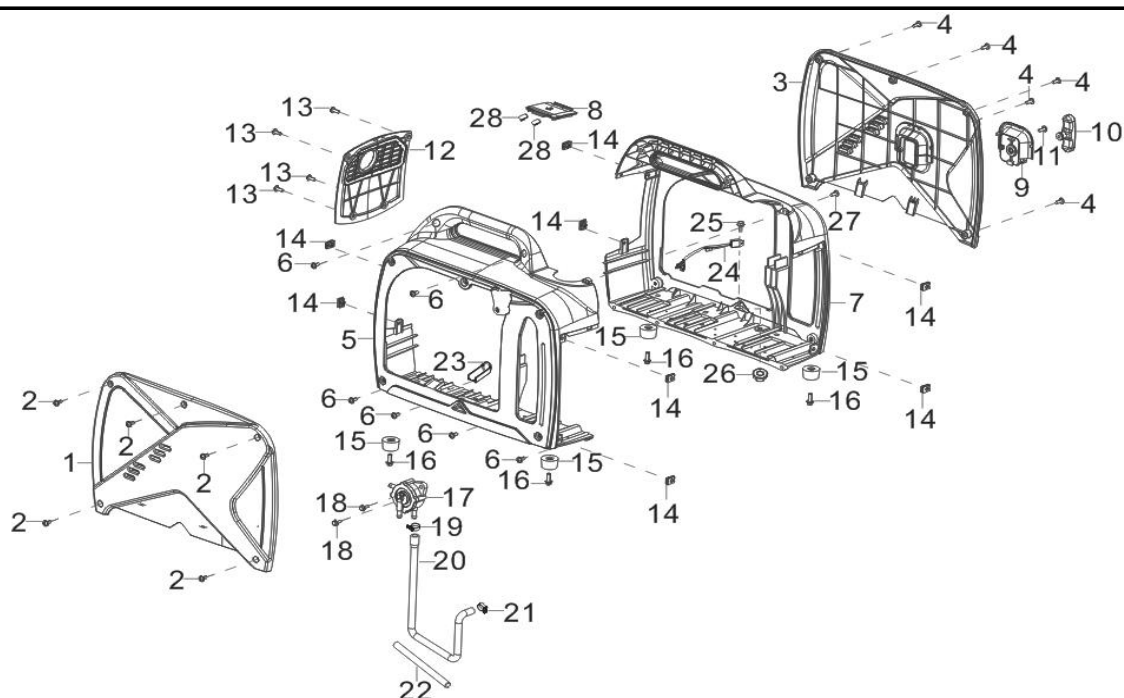


REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
E10-1	80092-Y9T0110-BQ00	COVER BOARD, LEFT	1	
E10-2	90255-0512-53	ASSEMBLY, PAN HEAD SCREW AND WAS	5	
E10-3	80096-Y9T0110-BQ00	COVER BOARD, RIGHT	1	
E10-4	90255-0512-53	ASSEMBLY, PAN HEAD SCREW AND WAS	5	
E10-5	80091-Y9T0110-Q200	SHELL, LEFT	1	
E10-6	90255-0516-53	ASSEMBLY, PAN HEAD SCREW AND WAS	6	
E10-7	80095-Y9T0110-Q200	SHELL, RIGHT	1	
E10-8	80102-Y9T0110-Q200	REPAIR GATE, SPARK PLUG	1	
E10-9	28004-Y9T0110-Q200	GUIDE SUBASSEMBLY, STARTING	1	
E10-10	28210-Y2V0110-0000	HANDLE, RECOIL STRATER CABLE	1	
E10-11	90105-0512-53	SCREW , CROSS RECESSED HEAD	1	
E10-12	18002-Y9T0110-Q200	COVER, MUFFLER SIDE	1	
E10-13	90255-0512-53	ASSEMBLY, PAN HEAD SCREW AND WAS	4	
E10-14	17199-Y2V0110-0000	NUT	8	
E10-15	51014-Y9T0110-0000	FOOT, FRAME SUPPORT BRACKET	4	
E10-16	90001-0612-01	BOLT	4	
E10-17	16300-Z130120-0000	PUMP ASSY, GASOLINE	1	
E10-18	90001-0516-01	BOLT	2	
E10-19	90685-Z020110-0000	CLAMP	1	
E10-20	90686-Y9T0210-0000	TUBE, FUEL	1	
E10-21	90685-Z030220-0000	CLAMP	1	
E10-22	30431-Y020110-0000	JACKET, RUBBER	1	
E10-23	30431-Y9T0110-0000	JACKET, RUBBER	1	
E10-24	30060-Y2V0310-0000	REGULATOR, VOLTAGE	1	
E10-25	90001-0516-01	BOLT	1	
E10-26	90305-0500-31	NUT	1	
E10-27	90107-0313-53	SCREW , CROSS GROOVE PAN	1	
E10-28	53006-Y9T0110-0000	RUBBER CUSHION	2	

FIG.11 PANEL SUBASSEMBLY, CONTROL (F62)

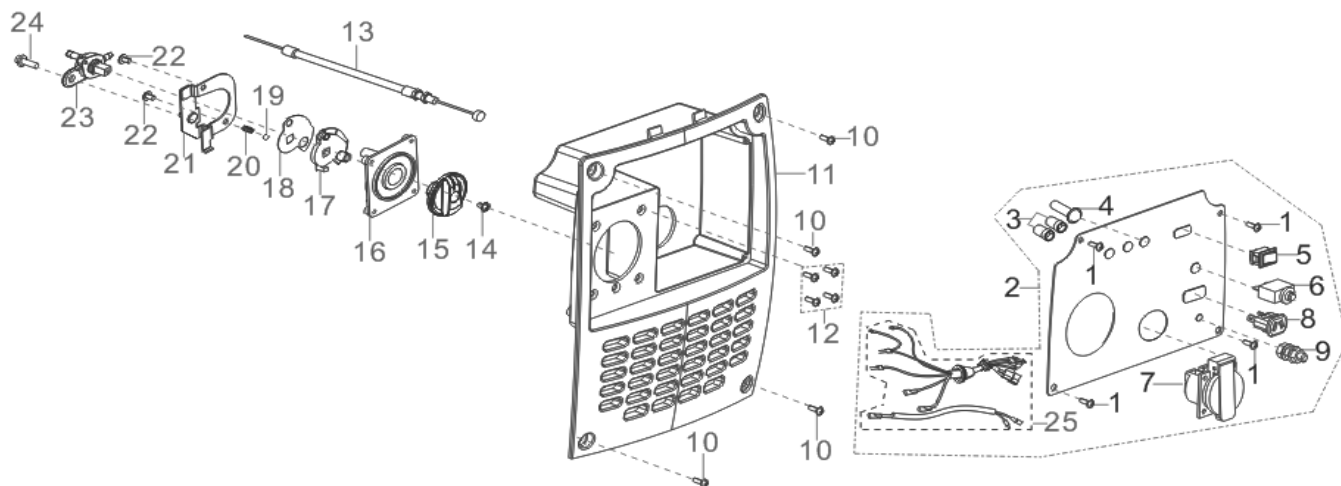


REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
F62-1	90107-0413-03	SCREW , CROSS GROOVE PAN	4	
F62-2	35610-YAY0110-0000	PANEL SUBASSEMBLY, CONTROL	1	
F62-3	90803-Y2V0210	INDICATOR LIGHT	2	
F62-4	90803-Y2V0110	INDICATOR LIGHT	1	
F62-5	35160-Y0G0110	SWITCH, IDLE SPEED	1	
F62-6	31234-YAY0110	PROTECTOR, OVERCURRENT	1	
F62-7	35614-Y020110	SOCKET SUBASSEMBLY, POWER SUPPLY	1	
F62-8	35619-Y2V0110	SOCKET SUBASSEMBLY, D.C	1	
F62-9	35629-Y2V0110	TERMINAL SUBASSEMBLY, GROUNDING	1	
F62-10	90255-0516-53	ASSEMBLY, PAN HEAD SCREW AND WAS	4	
F62-11	35680-Y9T0110-Q200	SEAT, PANEL	1	
F62-12	90129-0410-01	SCREW , CROSS GROOVE PAN	4	
F62-13	16080-Y2V0110-0000	HANDLE SUBASSEMBLY, CHOKE	1	
F62-14	90103-0412-51	SCREW	1	
F62-15	35643-Y2V0210-Q200	KNOB	1	
F62-16	35021-Y2V0120-Q200	CONTROL BOX	1	
F62-17	94111-Y2V0130-Q200	COVER BOARD	1	
F62-18	16144-Y2V0110-0000	BLOCK , CHOKE CABLE STOPPER	1	
F62-19	90543-0500-00	BALL, STEEL	1	
F62-20	16527-Y2V0120-0000	SPRING, STOPPER ADJUSTING	1	
F62-21	50132-Y2P0110-0000	BRACKET, FUEL COCK	1	
F62-22	90129-0416-01	SCREW , CROSS GROOVE PAN	2	
F62-23	16750-Y2V0140-0000	FUEL VALVE	1	
F62-24	90007-0612-A1	BOLT	1	
F62-25	35660-Y9T0110-0000	HARNESS, CONTROL PANEL WIRING	1	

FIG.12 (E12)

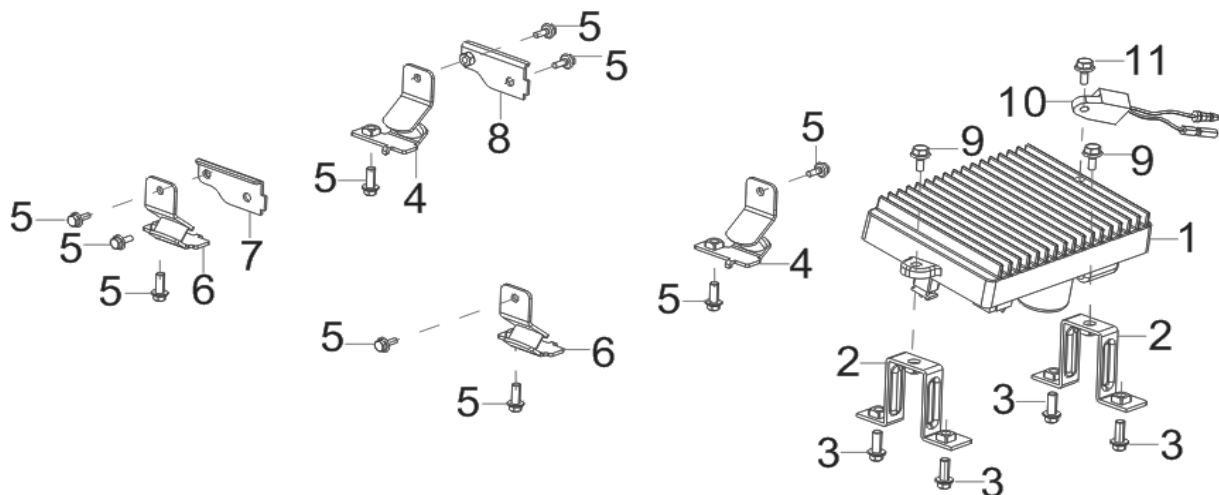

REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
E12-1	30043-YAY0110-0000	INVERTOR	1	
E12-2	30081-Y9T0110-0100	ASSEMBLING FRAME, INVERTER	2	
E12-3	90001-0616-01	BOLT	4	
E12-4	51011HY9T0110-0000	CUSHION, ENGINE FRAME RIGHT	2	
E12-5	90001-0612-01	BOLT	10	
E12-6	51009HY9T0110-0000	CUSHION, ENGINE FRAME LEFT	2	
E12-7	51124-Y9T0110-0100	HOLDER, ASSEMBLING	1	
E12-8	51124-Y9T0210-0100	HOLDER, ASSEMBLING	1	
E12-9	90001-0620-01	BOLT	2	
E12-10	37050-Z010310-0000	PROTECTOR, OIL	1	
E12-11	90001-0610-01	BOLT	1	

11 : ROTOR/STATOR (F63)

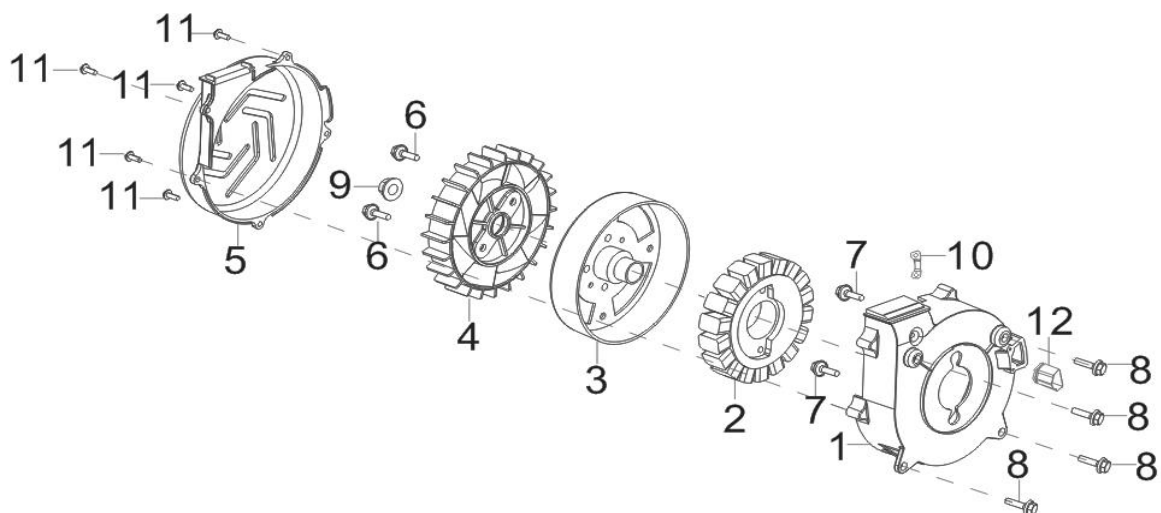

REF.NO.	PART NO	DESCRIPTION	Q'TY	REMARKS
F63-1	30024-Y9T0110-Q200	SHROUD, MOTOR	1	
F63-2	30120-YAY0110-0000	STATOR COMP.	1	
F63-3	30110-Y9T0110-0000	ROTOR COMP	1	
F63-4	19352-Y9T0110-Q200	IMPELLER	1	
F63-5	28104-Y9T0110-Q200	COVER, SHROUD UPPER	1	
F63-6	90001-0610-01	BOLT	2	

F63-7	90001-0525-01	BOLT	2	
F63-8	90007-0512-A1	BOLT	4	
F63-9	90306-1000-31	NUT	1	
F63-10	54066-Y9T0110-0100	CLAMP	1	
F63-11	90107-0313-53	SCREW , CROSS GROOVE PAN	5	
F63-12	80155-Y9T0110-0000	RUBBER CUSHION	1	